



- 27. 하늘막 (CYCLORAMA)
- 26. 풀막 2 (#2 DRAW CURTAIN)
- 25. 태극기봉 (FLAG BATTEN)
- 24. 장치봉 3(#3 SET BATTEN)
- 23. 풀막 3 (#3 DRAW CURTAIN)
- 22. 후면음향반사판 (ACOUSTICAL SHELL-BACK WALL)
- 21. 조명봉 3 (#3 LIGHT BATTEN)
- 19, 20. 다리막 3, 4 (#3, 4 HOUSE LEG)
- 18. 천장을향반사판 2 (#2 ACOUSTICAL SHELL-CEILING)
- 16, 17. 측면음향반사판 3, 4 (#3, 4 ACOUSTICAL SHELL-SIDE WALL)
- 15. 장치봉 2 (#2 SET BATTEN)
- 14. 영사막 (SCREEN)
- 13. 풀막 1 (#1 DRAW CURTAIN)
- 12. 보더라이트 2 (#2 BORDER LIGHT)
- 11. 조명봉 2 (#2 LIGHT BATTEN)
- 10. 장치봉 1 (#1 SET BATTEN)
- 08, 09. 다리막 1, 2 (#1, 2 HOUSE LEG)
- 07. 천장을향반사판 1 (#1 ACOUSTICAL SHELL-CEILING)
- 05, 06. 측면음향반사판 1, 2 (#1, 2 ACOUSTICAL SHELL-SIDE WALL)
- 04. 보더라이트 1(#1 BORDER LIGHT)
- 03. 조명봉 1 (#1 LIGHT BATTEN)
- 02. 면막 (MAIN CURTAIN)
- 01. 현수막봉 (PLACARD BATTEN)